
NEW YORK OTTOMAN TV BED

ASSEMBLY INSTRUCTION

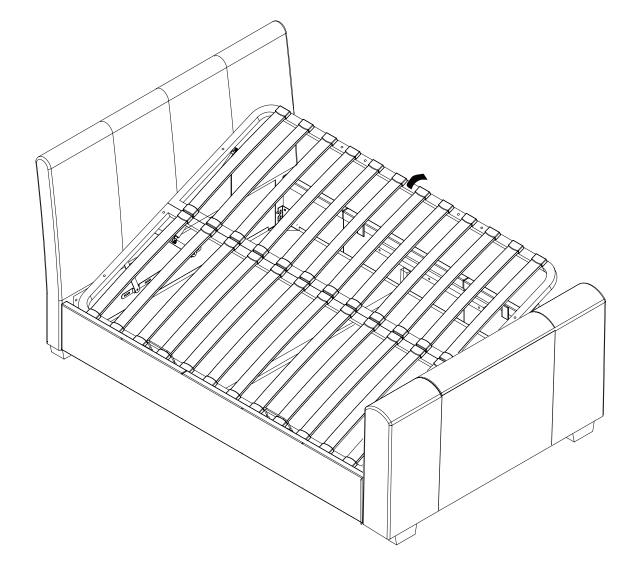

KING: 235.5 x 160 x 101.5_78 CM (LWH_H)

Safety and Care Advice

Assembly time: 1.5 Hours

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- Due to the size of this product we recommend that it is assembled in the room intended for use.
- Maximum TV Dimensions: 70 Wide x 39 High x 6cm Deep.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- · Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Please dismantle for transportation
- This product complies with the essential requirements of the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC
- Keep away from temperatures over 35°C.
- · Only use recommended accessories.
- Tools not included unless stated in the parts list..

WARNINGS

- This product is intended for a maximum person's weight of 100kg per side. Do not exceed this weight.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do NOT use power tools to construct this product.
- Do NOT tighten screws until fully assembled.
- Do NOT over tighten screws or bolts.
- Do NOT use this product if parts are missing, damaged or worn.
- Do NOT stand on the product
- Please pay particular attention when children or animals are present to ensure that no accidental entrapment occurs whilst operating this product.
- DO NOT expose this product to dripping or splashing, rain or areas with heavy moisture.
- DO NOT place any objects filled with liquids, such as vases, on the product.
- DO NOT place the product in direct sunlight, open flames such as candles or heat, such as radiators. Keep away from temperatures over 35°C.
- DO NOT insert foreign objects into the product.
- · DO NOT attempt to repair this unit by yourself.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

Safety and Care Advice


WARNINGS - ELECTRICAL COMPONENTS

- · Before using the unit, please read these instructions carefully.
- Unplug the unit during lightning storms or when unused for long periods of time.
- The unit should be powered off before plugging the product into the power outlet. This unit should be powered off before unplugging the product. Install this unit so that the power cord can be unplugged from the socket immediately if any problems occur.
- Never try to repair this product yourself, take it to an authorized technician. Trying to remove panels
 or repairing the unit yourself could result in an electric shock. Servicing is required when the unit has
 been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or
 objects have fallen onto the unit, the unit has been exposed to rain or moisture or does not operate
 normally.
- In order to prevent injury, never attempt to remove the cover or any other components.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children (under the age of 13) should be supervised to ensure that they do not play with the appliance.

Parts Checklist


| Ref. | Description | Qty | Ref. | Description | Qty |
|------|-------------------|-----|------|----------------|-----|
| 1 | Headboard | 1 | 6 | 'U' shaped bar | 1 |
| 2 | Footboard | 1 | 7 | 3mt Power Lead | 1 |
| 3 | Side Panel | 2 | 8 | Cable Tie | 3 |
| J | Olde I allel | _ | 9 | Cable Clip | 3 |
| 4 | Metal Slat-Frame | 1 | | | |
| 5 | Base Fabric Cover | 1 | | | |


Parts Identification

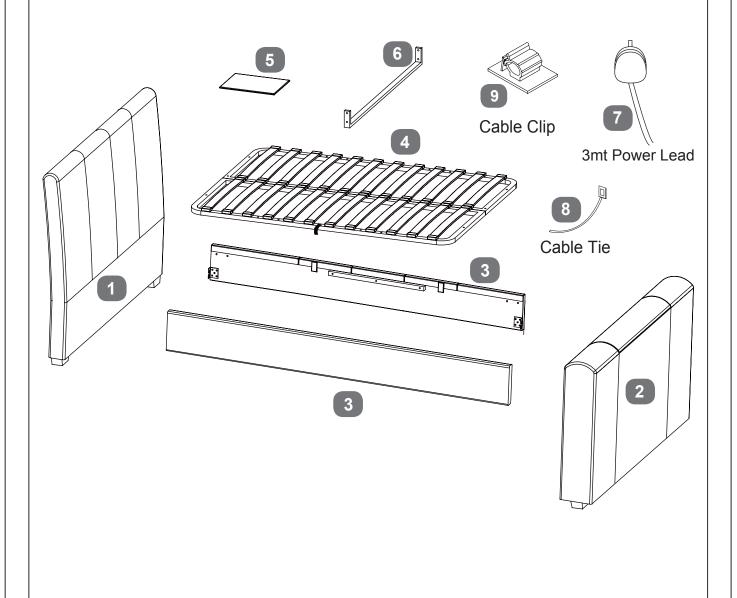



NYO150BLK/NYO150BRW/NYO150WHT


NEW YORK OTTOMAN TV BED KING SIZE

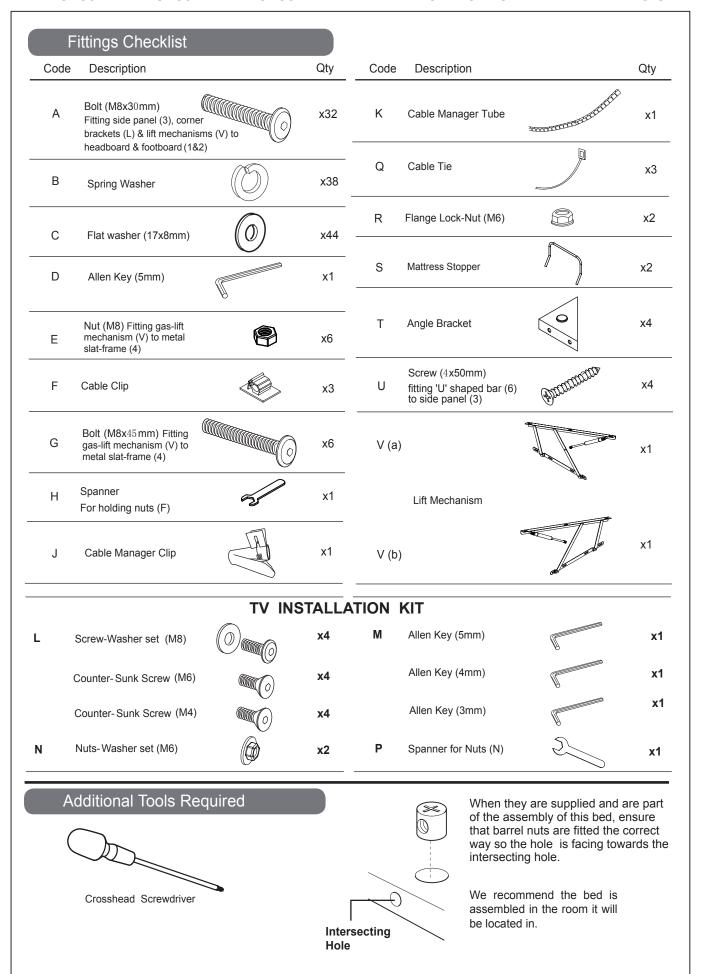

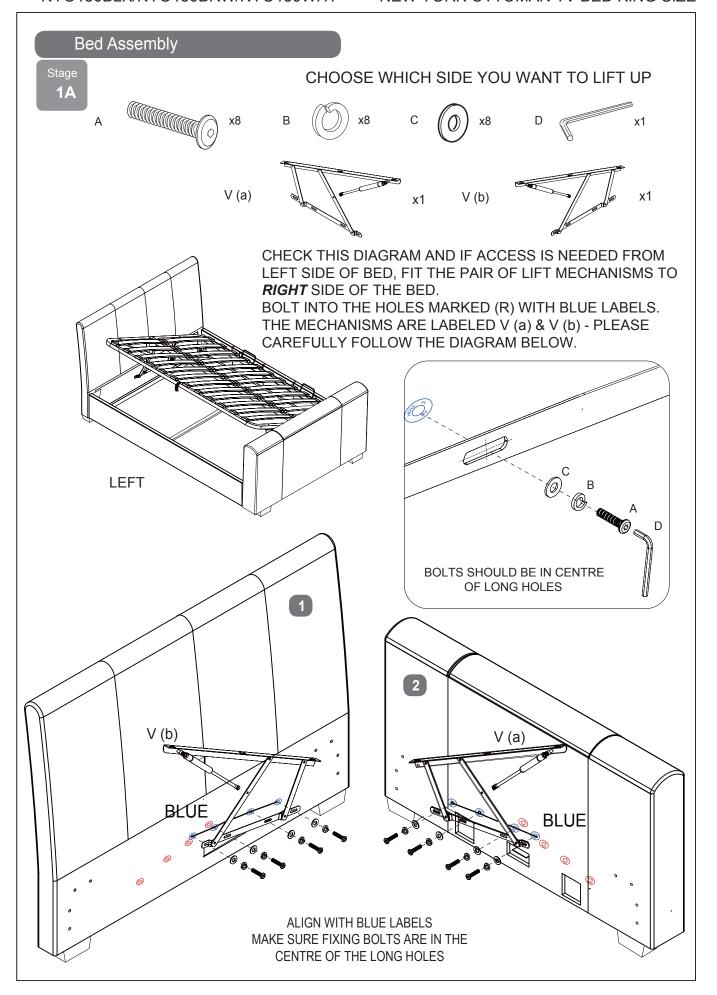

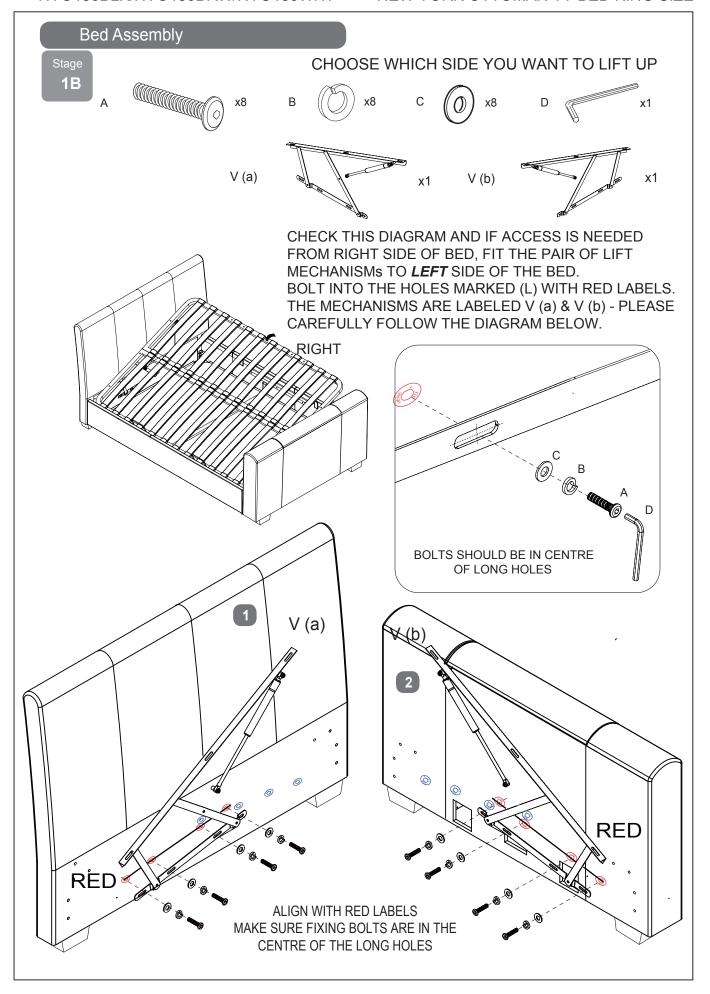

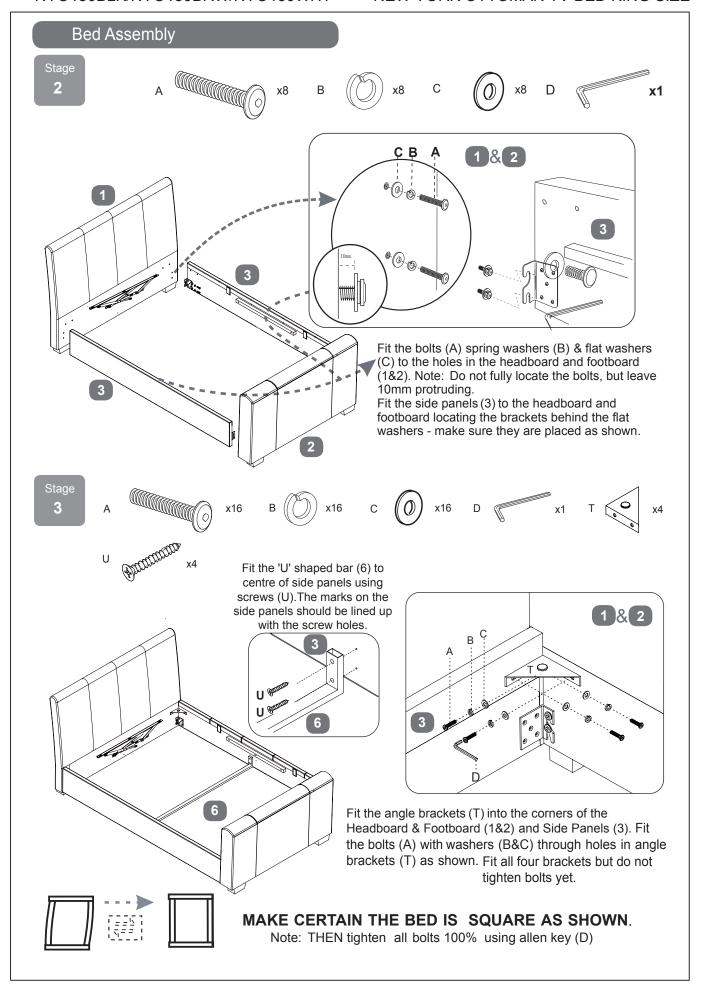

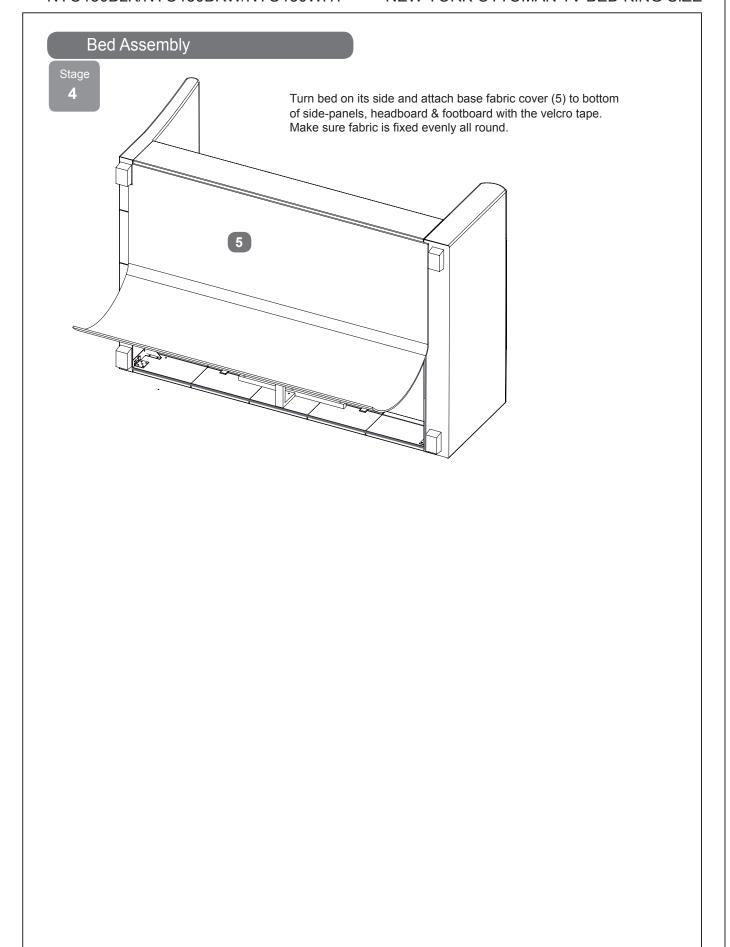


PREPARE TO INSTALL TV Stage

Before fitting the television to the TV lift, please check below:


Maximum dimensions of TV that can be used in this bed:


Width = 70 cmDepth = 6 cm


Height = 39 cm

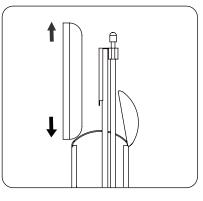



5

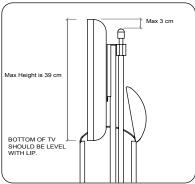

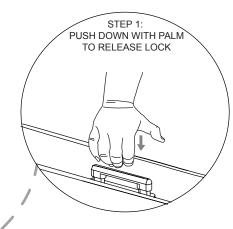

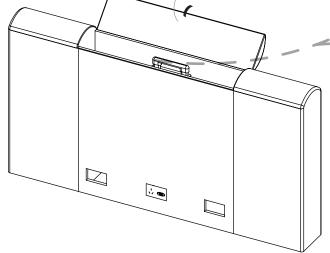


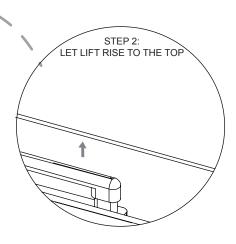


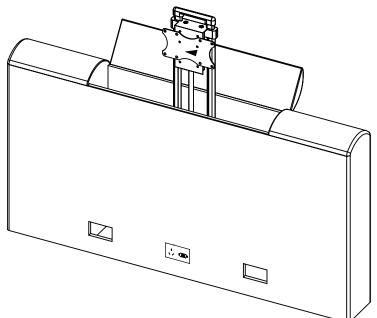


TV mounting bracket is factory fitted. If your TV has a 75 x 75mm VESA fixing remove it & fit TV directly to column bracket.

For 100x100mm or 200x100 VESA, use the TV mounting bracket. Fit to TV first making sure it is level. Use screws supplied with TV or from TV installation kit in main hardware pack. For any other Vesa mounting, please use an adaptor plate that can be purchased from an on-line store.

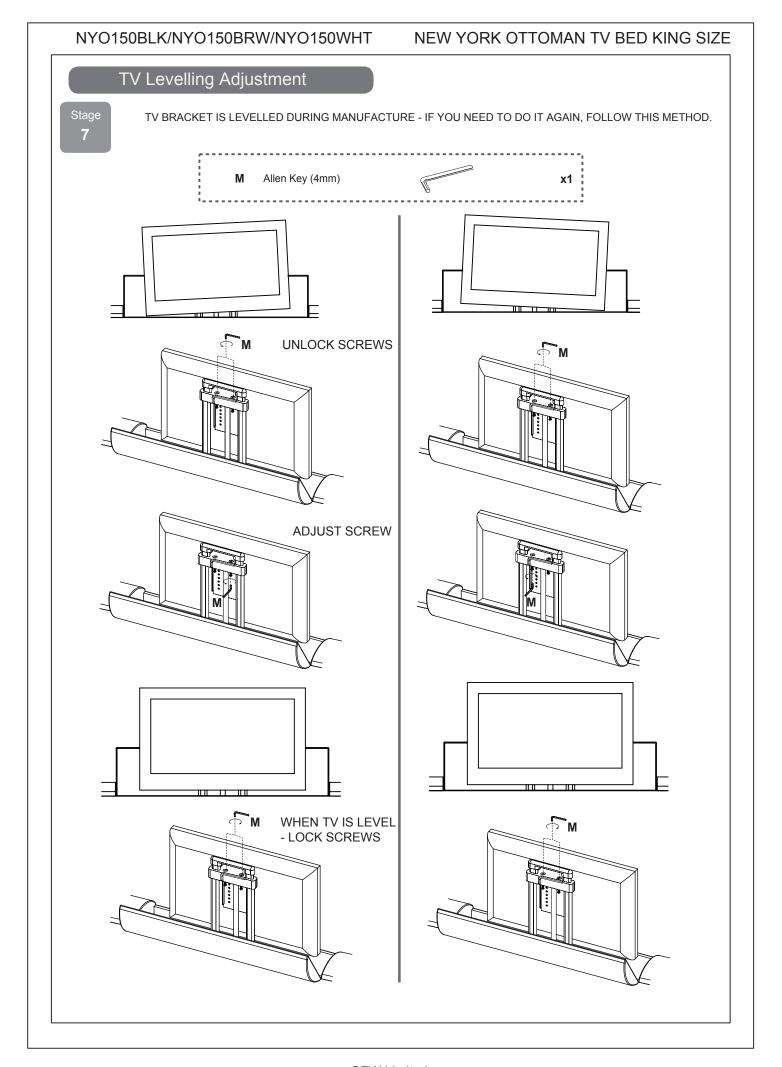

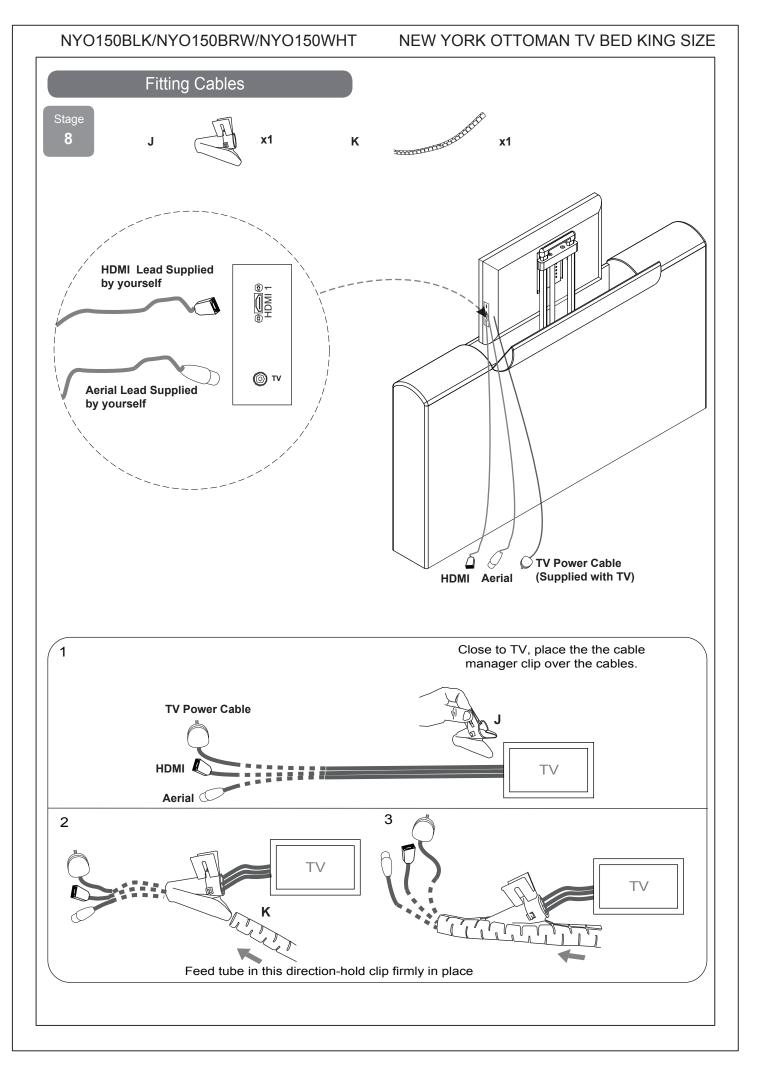

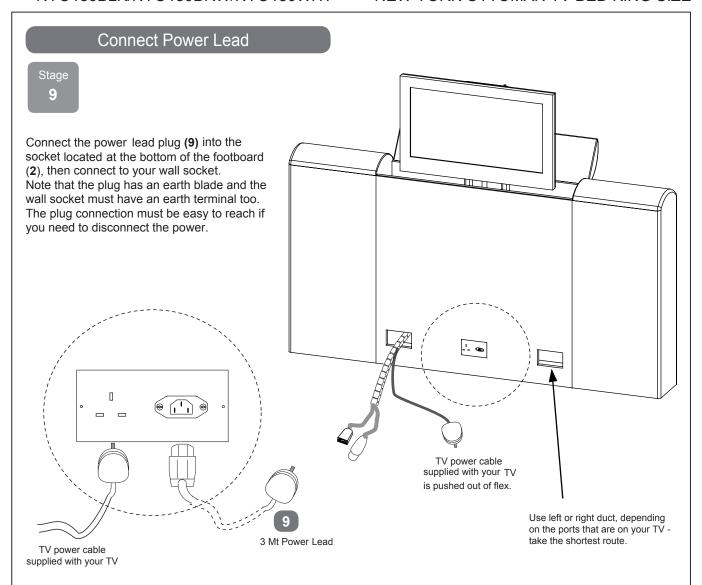

Plug the TV power cable into the socket at bottom of footboard then connect your own media cables as required.

Connect the cables to the television & media equipment making sure the cables are not loose. If necessary use cable ties & cable clips to route cables safely (10&11).

The television can now be operated following the TV Operation Manual.

To lower the television back into the footboard, push TV lift down until it locks - note when TV is fitted, it is easier to push due to balance of the weight.


When down, power for TV turns off automatically.

When TV is raised, power turns back on automatically.

Trouble shooting


If your television does not operate please check all the power connections, both to the wall and to the socket in the footboard. Make sure TV is switched on.

Note: TV will only work when it is in the up position.

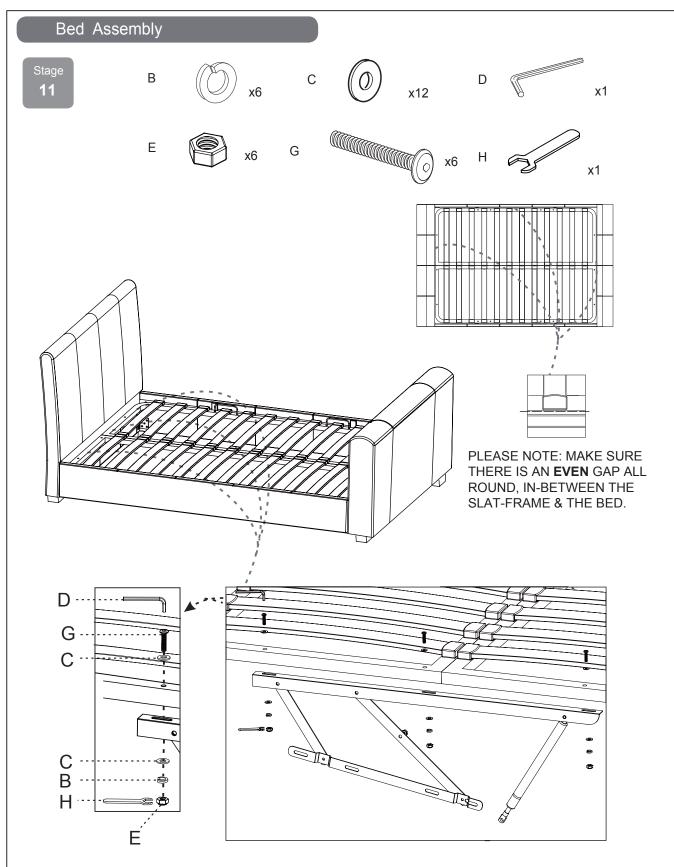


Use fixings (E), (C), (B) & (G)- tighten the bolt by using allen key (D) with spanner (H). NOTE: Do not fully tighten all the bolts before confirming the metal frame is in correct position. Frame must be in the centre of bed in length & width. Check frame is not likely to touch either headboard or footboard when lifting or closing. Tie lifting strap to opening side.

Make sure the x3 SETS of bolts are connected as shown. Once everything has been assembled, tighten all the bolts 100%.

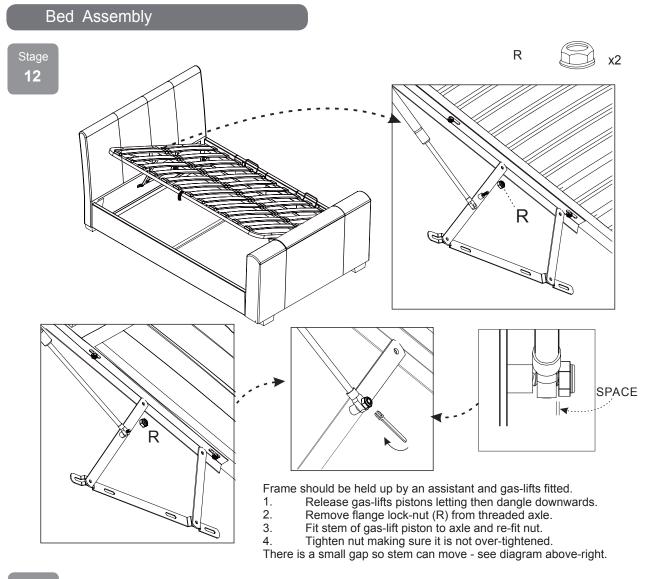

Push mattress stoppers x2 (S) into slat-frame.

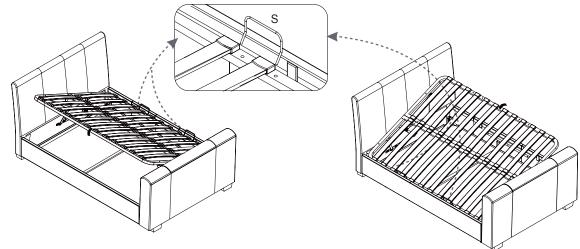

NOTE: Place mattress on slat-frame when frame is down. Lift with strap & close with strap which should always be accessible. Slowly lift frame by the lifting strap taking care to not lean over the bed because if the mattress is thin & light, frame will rise quickly. To close bed, push gently away from lifting strap side and down at the same time. The frame will close, speed of closing depends on weight of mattress so always keep fingers well clear of the metal frame.