




6'6 gamma 400



Model : GAMMA(BUDE) Bedstead *Assembly Instruction Sheet

- We suggest you spend a short time reading through this leaflet then follow the simple step-by-step instructions. Do not discard any packaging until you have checked all the parts and the pack of fittings. If you are missing any part contact LIMELIGHT BEDS LTD on 01455 850150 where the staff will do their best to help you.

PLEASE NOTE FOR BASE SET-UP INSTRUCTION SEE ADDITIONAL SHEET IN SLAT BOX 3

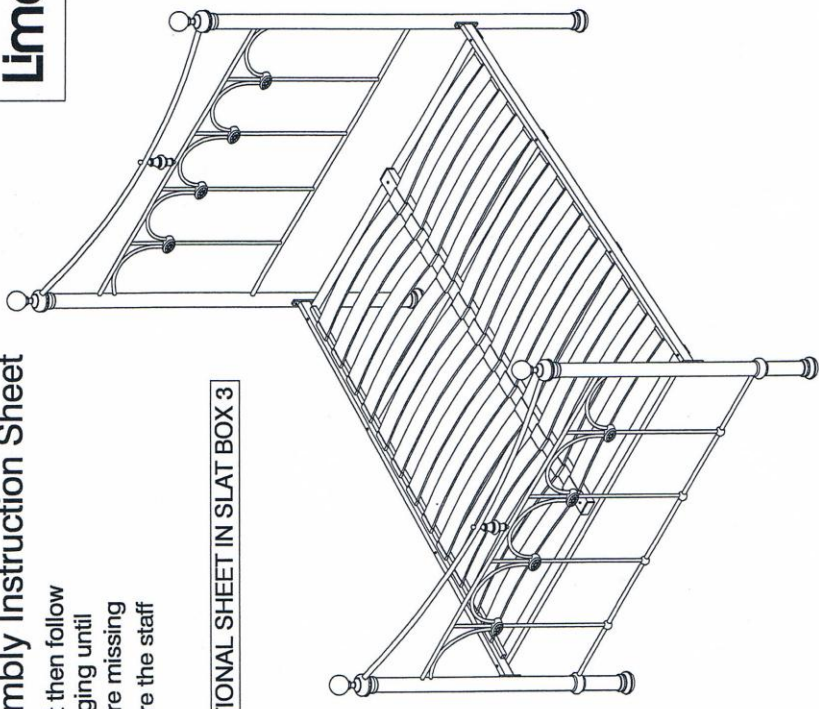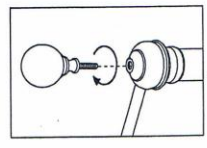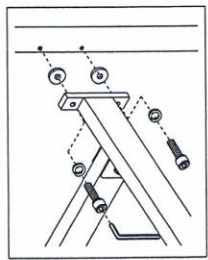

1pc	1pc	8pcs	8pcs	8pcs	4pcs	8pcs	1pc
Headboard	Footboard	Screw	Spring Washer	Finial	Circle Washer	Allen Key	

1. Please read through and follow the step-by-step instructions in the leaflet.
2. Please do not discard any packaging before you have checked all the parts and fittings are included.
3. We recommend that assembly is done in the room intended for use and it is assembled by two people.
4. Assemble this product on a flat and clean surface to avoid scratching.
5. Do not tighten any bolts before all the parts have been assembled loosely. Product and/or fittings might be damaged by over tightening screws or bolts. Beware of cross-threading the screws or nuts during assembly.
6. Keep fittings away from childrens' reach.

SAFETY WARNING: *Do not stand on the bedbase without a mattress on it.*

COMPONENT PARTS

[3] - Siderails x 2pcs



[4] - Centre Rail x 1pc



[5] - Across Bar x 4pcs



[6] - Centre Plastic Holders x 12pcs



[7] - Side Plastic Holders x 24pcs



[8] - Wooden Slat x 24pcs



FITTINGS

[A] - M8x20mm bolt x 8pcs



[B] - M6x60mm bolt x 10pcs




[C] - M6 Insert nut x10pcs




[D] - M4 Allen Key x 1pc




[E] - M5 Allen Key x 1pc



STEP 1: Attach the Siderails **3** to the Headend and Footend

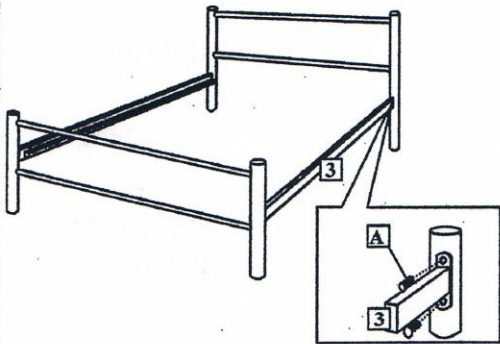



STEP 2: Attach Across Bar **5** follow by the Centre Rail **4** to Siderails **3** to form the bed base.

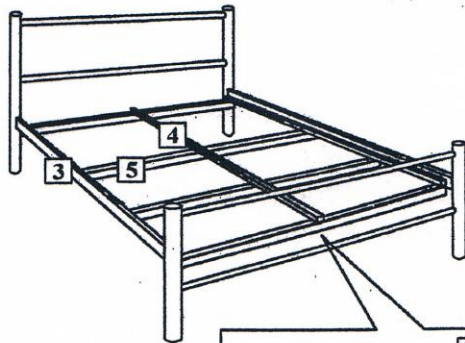

STEP 3: Insert the Bend Wood Slat **8** into the Plastic Holders **6, 7** as shown.



STEP 4: Align the pins on the Plastic Holders **6, 7** to the holes along the Centre Rail **4** and the Siderails **3**. Gently tap them into the holes.

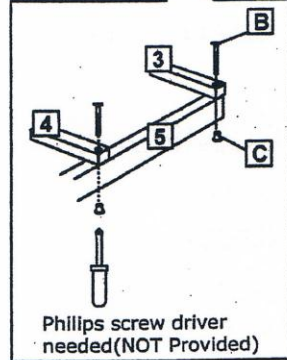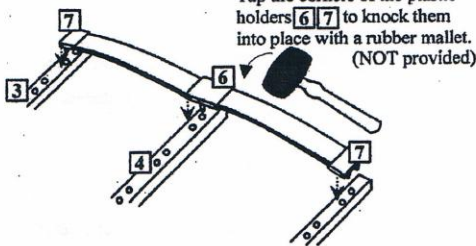

**Please check and tighten all bolts after assembling.
Remember to re-check and tighten screws and bolts periodically or when necessary.**