



# ASSEMBLY INSTRUCTIONS STRATUS OTTOMAN 4' BED

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR OTTOMAN BED FRAME.

#### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

#### **HEALTH & SAFETY:**

DO NOT jump on this bed frame

DO NOT use this bed frame if any parts are missing, damaged or worn

DO NOT use this bed frame unless all fixings are tightly secured

Always use on a level, even surface


Please keep small parts out of reach of children.

**WARNING**: Take care when assembling the base, assemble the ottoman as close to its final position. The Ottoman has a powerful mechanism and after assembly should only be opened when the mattress is in place.

**WARNING:** IF THIS BED FRAME IS ON A LAMINATED FLOOR YOU MUST PLACE SOME PROTECTION UNDER ALL LEGS TO STOP THE BED FRAME FROM MOVING. IF THIS IS NOT ADHERED TO THERE IS NO GUARANTEE IF THE BED FRAME COLLAPSES

#### **CARE & MAINTENANCE:**

Periodically check all screws & fixings to ensure they are tightly secured DO NOT push the bed frame as this will damage the legs. Always lift the bed with 2 people whenever you need to change the bed frames position Keep any sharp objects away from the bed frame

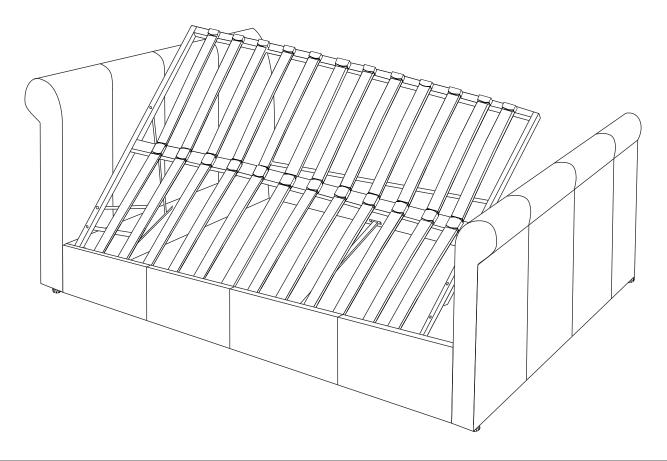

PARTS LIST				HARDWARE LIST		
No	Item	Qty	No	Item	Qty	
1	Headboard	1	Α	M5 Allen Key	1	
2	Footboard	1	В	Bolts (M8x30mm)	8	
3	Side Rails	2	С	Spring Washer (M8)	14	
4	Cross Bar	1	D	Flat Washer (M8x22mm)	14	
5	Centre Support Bar	1	Е	Nuts (M8x14mm)	16	
6	Legs	4	F	Spanner (M14)	1	
7	Slats	26	G	Bolts (M6x16mm)	2	
8	Support Leg	1	Н	Bolts (M8x40mm)	18	
9	Pull Strap	1	I	Bolts (M8x65mm)	4	
10	Woven Fabric	1	J	Bolts (M8x16mm)	4	
11	Front Frame Rail	1	K	Single Slat Caps	26	
12	Back Frame Rail	1	L	Centre Slat Caps	13	
13	Left Frame Rail	1	М	Hydraulic part	2	
14	Right Frame Rail	1	N	Batten	2	
15	Cross Support Bar	2	0	M4 Allen Key	1	


## Step 1

To fix the legs(6) to the headboard(1)and footboard(2).

To fix the side rails(3) to the headboard(1) and footboard(2) you will need to use hardware parts (B), (C), (D) with the M5 allen key(A).

DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE BED FRAME AND WILL INVALIDATE ANY CLAIMS.

DO NOT FULL TIGHTEN AT THIS STAGE.

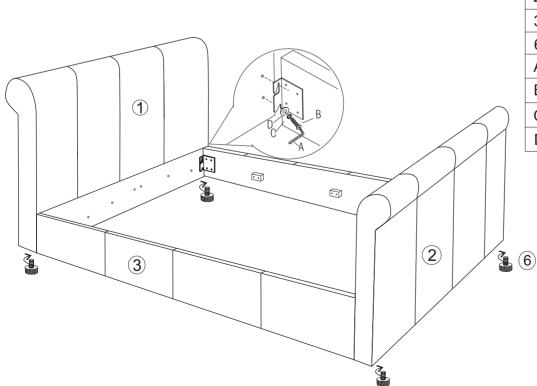

1	Headboard x 1	
2	Footboard x 1	
3	Side rails x 2	
6	Legs x 4	
Α	M5 Allen Key	
В	Bolts(M8x30mm) x 8	()IIIIII
С	Spring washer x 8	0
D	Flat washer x 8	0


#### Step 2

To attach the hydraulic part(M) and batten(N) to the headboard(1),footboard(2) you will need to use hardware parts (H) and (C) and (D) with the M5 allen key(A).

To fix the cross bar(4) to the side rails(3) you will need to use hardware parts (G) with a screwdriver (not provided).

DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE BED FRAME AND WILL INVALIDATE ANY CLAIMS.

<i>,</i> (141	o will invite on the		
1	Headboard x 1		
2	Footboard x 1		
3	Side rails x 2		
4	Cross Bar x 1		
Α	M5 Allen Key		
С	Spring Washer x 6 °		
D	Flat Washer x 6		
G	Bolts (M6x16mm) x 2		
Н	Bolts (M8x40mm) x 6		
М	Hydraulic part x 2		
Ν	Batten x 2		
0	M4 Allen Key x 1		

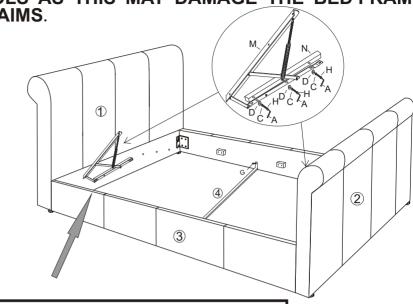

3 OF 4

Do not try to press down the gas lift hinge now. It is hard because of the resistance of gas lift struts. Please go to next step to assemble the metal frame.

# Step 3

To attach the front frame rail(11) and back frame rail (12) to the left frame rail (13) and right frame rail(14), you will need hardware parts (J) with the M5 allen key(A). To attach the centre support bar(5) to the front frame rail(11) and back frame rail(12), you will need hardware parts (H) and (E) with the M5 allen key(A) and the spanner(F). To attach the support leg (8) to the centre support bar(5), you will need hardware parts (H) and (E) with the M5 allen key(A) and the spanner(F).


DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE BED FRAME AND WILL INVALIDATE ANY CLAIMS. Centre Support Bar x 1 Support Leg x 1 Front Frame Rail x 1 Back Frame Rail x 1 13 Left Frame Rail x 1 Right Frame Rail x 1 M5 Allen Key x1 Nuts x 6 Spanner x 1 (13)Bolts (M8x40mm) x 6 Bolts (M8x16mm) x 4 ADB OARD (14)

## Step 4

To attach the metal frame (1 1/12/13/14) to the hydraulic parts (M), you will need to use hardware parts (H), (E) with the M5 allen key(A) and the M14 spanner (F). To atach the cross support bar(15) to the left frame rail(13) and the right fame rail(14), you will need by use hadwar e parts (1), (E) with the M5 allen key(A) and the M14 spanner (F).

DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE BED FRAME AND WILL INVALIDATE ANY CLAIMS.

AND WILL INVALIDATE A			
15	Cross Support Bar x2		
Α	M5 Allen Key		
Е	Nuts x 10		
F	Spanner		
Н	Bolts (M8x40mm) x 6		
I	Bolts (M8x65mm) x 4		

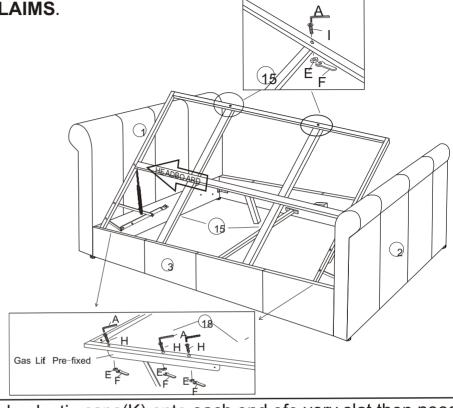

# Step 5


To assemble the slats(7) place a single plastic caps(K) onto each end ofe very slat then need push the centre slat caps(L) into the metal frame.

To attach the pull strap(9) toth e lef or right frame rail (13/14) you will place the pull strap(9) beneath the metalfr ame and then pull the strap on the inner side of the frame through the strap onth e outer side of the frame to form a knot.

Tilt h e bedframe on b its side and attach the fabric base (10.)

DO NOT USE ANY POWER TOOLS AS THE MAY DAMAGE THE BED FRAME AND WILL INVALIDATE ANY CLAIMS.

7	Slats x 26
9	Pull Strap x 1
10	Woven Fabric x1
K	Single Slat Caps x 26
L	Centre Slat Caps x13

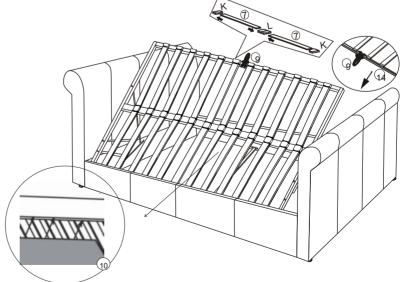

#### Additional hfo rmation:

- •For complete product information , images and dimension diagrams please visit the website www.birlea.com
- •If you have any issues with your item please contact the retailer directly you purchased it from who wll be able to resolve any issues with Birlea.
- •Why don't you send us photos of your assembled furnitue to <a href="mailto:info@birlea.com">info@birlea.com</a> to be shared in our #birle ahome feature on instagram.

