



ASSEMBLY INSTRUCTIONS LYNX 3 DRAWER BEDSIDE

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR LYNX 3 DRAWER BEDSIDE.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

Assembly should be carried out with this item laying flat, not standing upright. Assemble on a soft, clean surface to prevent damages. To remove the printed numbers on the pieces, use the eraser provided.


HEALTH & SAFETY:

DO NOT use this bedside if any parts are missing, damaged or worn. DO NOT use this bedside unless all fixings are secured. Always use on a level, even surface.

CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure. DO NOT push the bedside as this will damage the base. Always lift the bedside with two people to reposition. Keep any sharp objects away from the bedside.



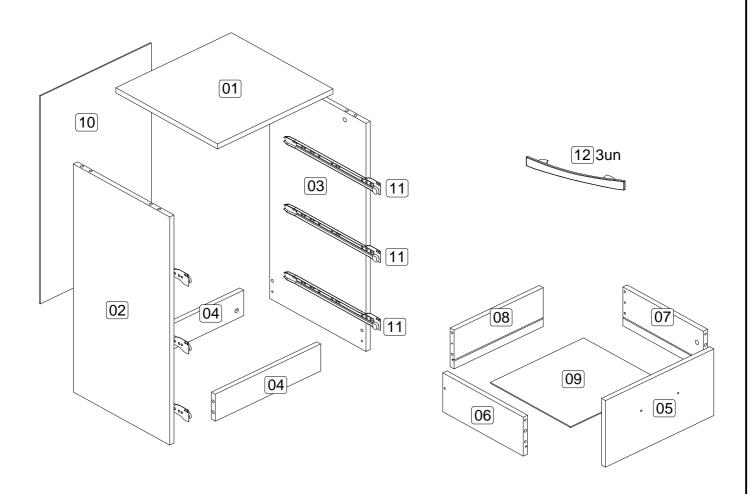

Parts List			Hardware List			
Part	Descripion	Qty	Part	Descripion		Qty
01	Top Panel	1	Α	8 x 30mm Wooden Dowel		32
02	Left Panel	1	С	Plastic Cap		6
03	Right Panel	1	D	3 x 14mm Screw	- MIIII	25
04	Plinth	2	Е	3.5 x 25mm Screw		6
05	Drawer Front	3	F	4.5 x 45mm Screw	#	6
06	Left Drawer Panel	3	G	10 x 10mm Tack	<u> </u>	20
07	Right Drawer Panel	3	Н	Simple Minifix Screw		14
80	Drawer Back	3	I	Cam Lock		14
09	Drawer Base	3	J	Glue		1
10	Back Panel	1	K	Small Plastic Foot	\$	4
11	Drawer Runners	3	L	Strap		1
12	Handles	3	М	Bushing		1
			N	5 x 60 mm Screw		1


^{**} You will need a small mallet and a screwdriver for assembly.

^{**} Some screws and wooden dowel may remain.

Page **3** of **5**


Step 1: Attach the drawer runners (11) to the left panel (2) and right panel (3) using hadware part D. Insert hardware parts A and H into each side panel using a small mallet and screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

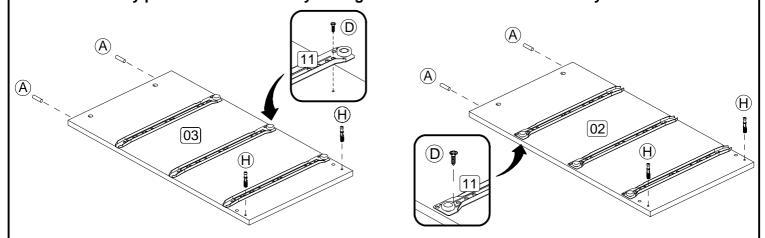


Step 2: Insert hardware parts A and H as shown using hardware part J, a small mallet and a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

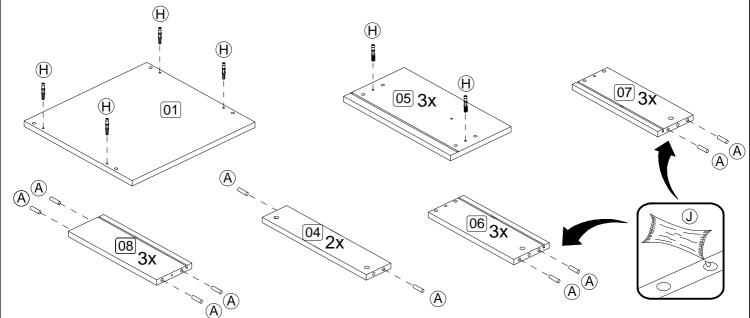


Step 3: Attach the left panel (2) and right panel (3) to the plinths (4) using hardware part I and a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

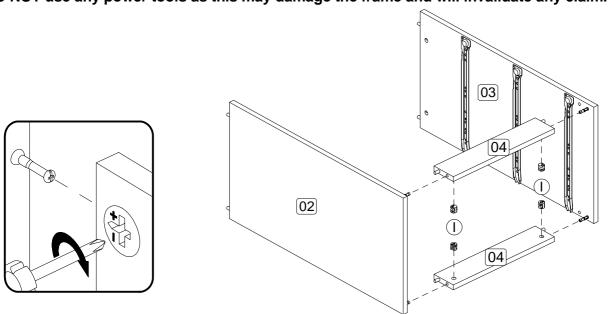


Step 4: Attach the top panel (1) using hardware parts I then attach hardware parts K to the base using hardware part G. You will need to use a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

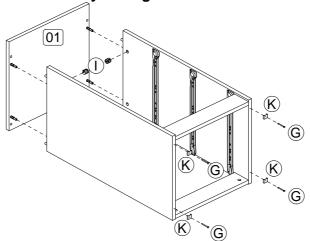


Step 5: Secure the back panel (10) using wardware part G and a small mallet (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

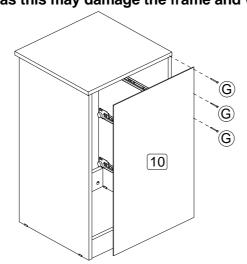

Step 6: Assemble the drawer components using hardware parts C, D, E, F, I, and J with a screwdriver (not provided).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

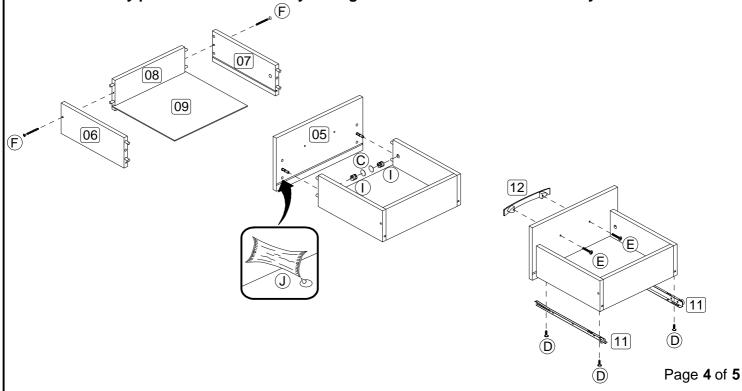


Step 7: To secure the item to the wall use hardware parts L, M and N using a screwdriver (not provided). Then attach hardware part D to the item with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Birlea Furniture advise you use the wall straps provided to further enhance the safety of this product

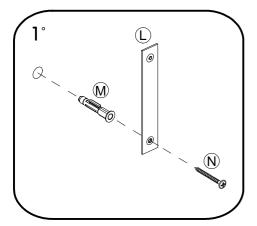

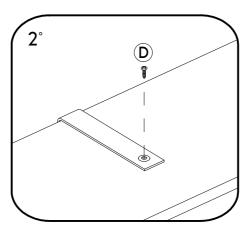

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.

