
Thank you for purchasing the END LIFT OTTOMAN BED. Please read the instructions carefully to ensure safe operation of the product.

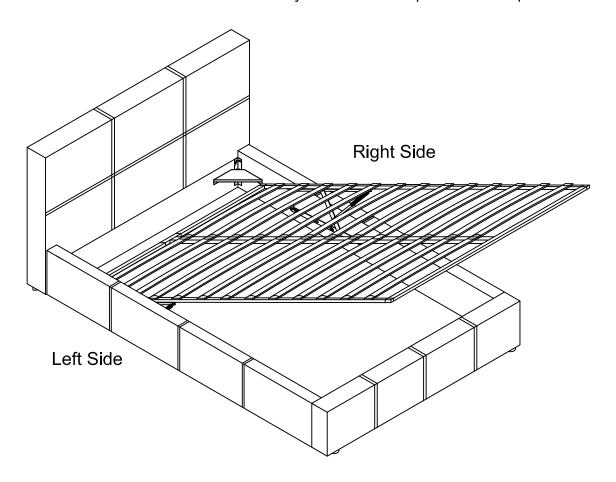

2010mm×1060mm×840mm 3ft Single

2010mm×1360mm×840mm 4ft Small Double

2010mm×1510mm×840mm 4ft 6 Double 2110mm×1660mm×840mm 5ft King

Finish: Faux Leather


COLOURS: BLACK, BROWN, WHITE

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fitting check list. Do not destroy any of the packaging until you are certain that you haave all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required









Batch no:WMI14904 Page 1 of 14

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is intended for a maximum person's weight of 80kg per side. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Please dismantle for transportation
- Tools are included.


WARNINGS

- Only use the storage compartment when the frame is fully raised in the up position.
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO use caution when operating, this bed uses a pressured mechanism.
- DO keep hands and fingers clear of the mechanism when opening and closing the bed for use.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT stand on the product.
- DO NOT remain on the bed whilst the lifting mechanism is in use.
- DO NOT expose this product to dripping or splashing, rain or areas with heavy moisture.
- DO NOT place any objects filled with liquids, such as vases, on the product.
- DO NOT insert foreign objects filled with liquids, such as vases, on the product.
- DO NOT insert foreign objects into the product or attempt to repair this unit by yourself.
- DO NOT place the product in direct sunlight, open flames such as candles or heat, such as radiators. Keep away from temperatures over 35°C.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.

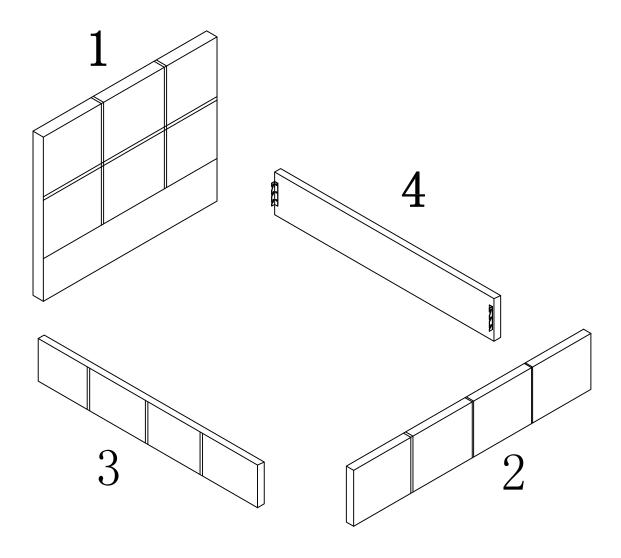


Batch no:WMI14904 Page 3 of 14

Parts and Fittings Checklist

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from small children.

Parts

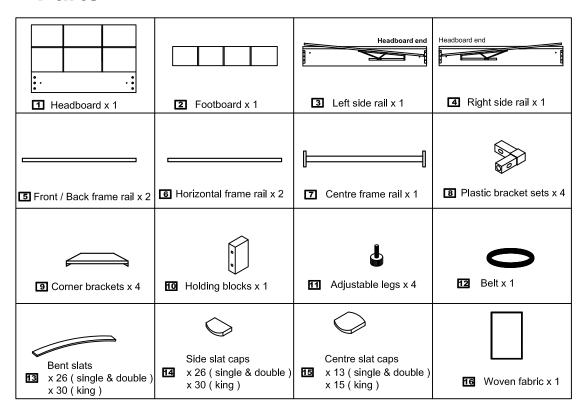


Note: the consumer must be able to hold up the fitting to this page so the exact same dimension. The scale MUST be correct. This image is an illustration only. Ensure the font used is the same as the rest of the Al. Name each fitting in the 'Dimensions' column.

Flxings(to scale)

Ref	Dimensions	Qty
Α	Bolt-M8x25	12
В	Bolt-M6x15	12
С	Blot-M6x40	4
D	Washer-M8	12
Е	Washer-M8	12
F	Bolt-M6x65	2
G	Nut-M8	2
Н	4mm Allen Key	1
Ī	5mm Allen Key	1
J	Spanner	1

10 20 30 40 50 60 70 80 90 100

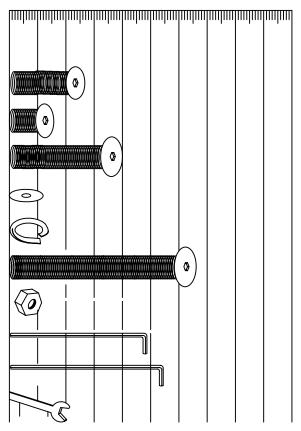

CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.


If you keep the fitting in a bowl during assembly you will be less likely to lose them!

! IMPORTANT PISTON INFORMATIN

The pistons in the construction of this product are extremely strong and cannot be operated hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.

Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame, THIS IS NORMAL.

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.

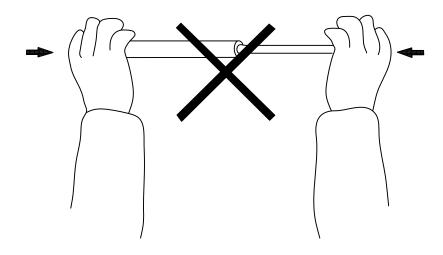


Batch no:WMI14904 Page 6 of 14

Hints and Tips


To operate the ottoman, always use 2 hands at arm's length and only where illustrated on this product . You must ensure the mattress is on the bed frame before lifting the mechanism. **Failure to do so may result in injury.**

To ensure your safety please do not stand too close in case the frame bounces up. The weight of the mattress loaded on the frame will keep the frame in a lower position until it is pulled upwards by the user.

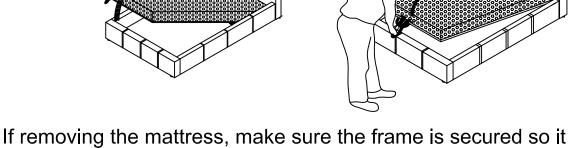

If removing the mattress, make sure the frame is secured so it does not flip open. When lifting the bed frame, remove pillows and covers.


Do not attempt to move the bed whilst the frame is in the upright positon.

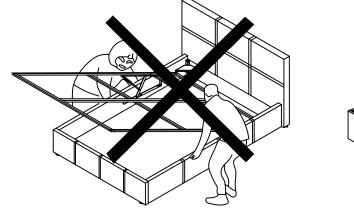





Batch no:WMI14904 Page 7 of 14


Lay out all 4 sides on a soft surface i.e. Rug, Carpet or Packaging Carton.

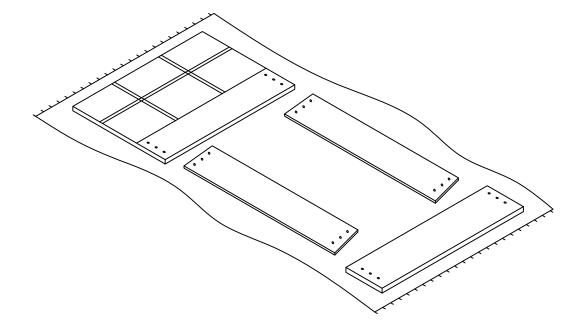


Batch no:WMI14904 Page 8 of 14

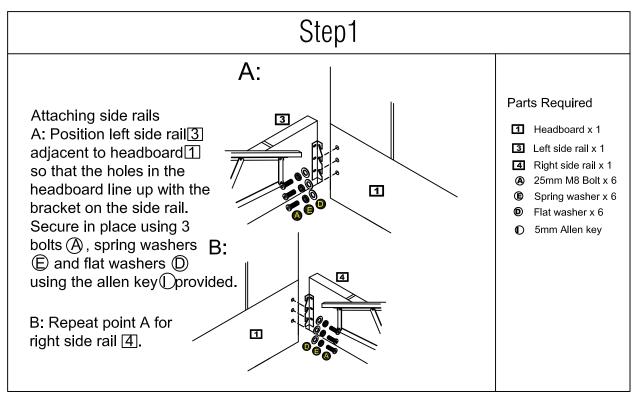

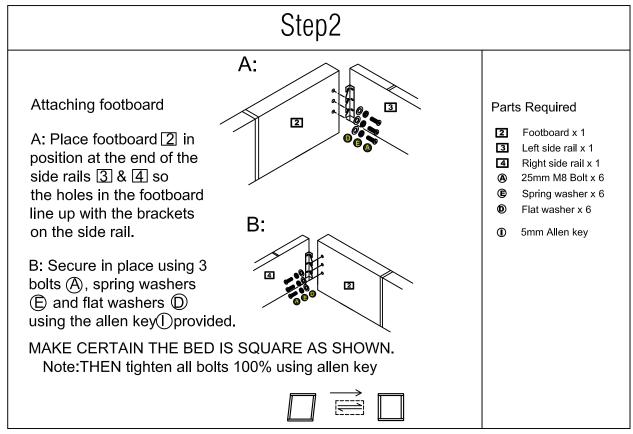

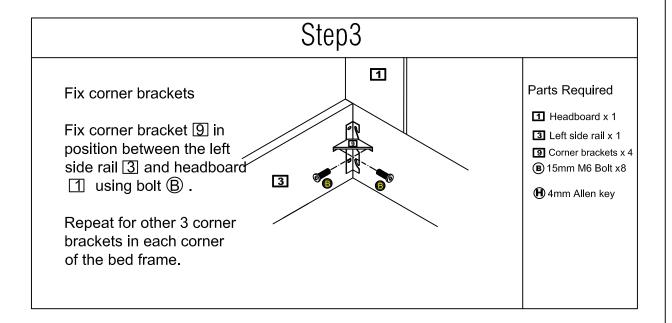


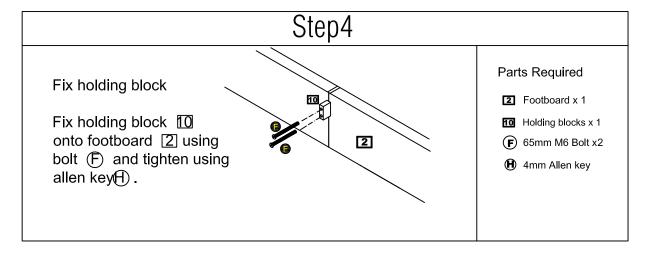

Step5

Secure pneumatic arms

Before securing the pneumatic arms, ensure the lifting mechanism is functioning correctly - it should lift up and down freely with adequate clearance on all sides.

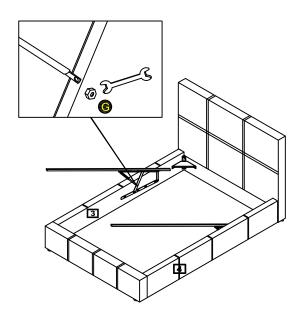

Parts Required


- 3 Left side rail x 1
- A Right side rail x 1
- **6** Nuts x 2
- Spanner


Note


secure the pneumatic lifting mechanisms on the side rails 3 & 4 into place by using nuts G as shown.


Do not overtighten the nuts.


Batch no:WMI14904 Page 11 of 14

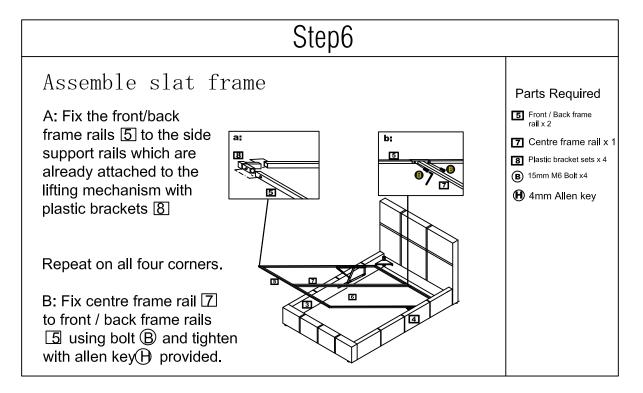

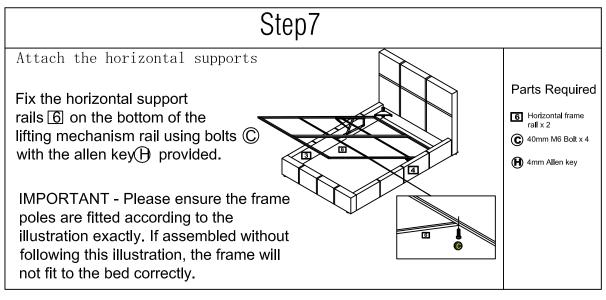

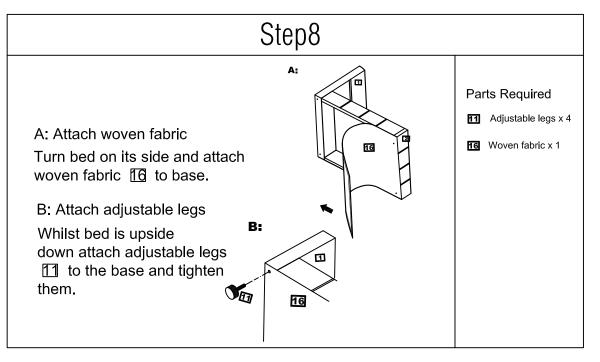

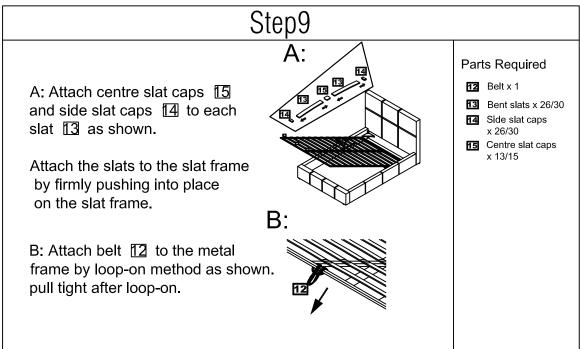

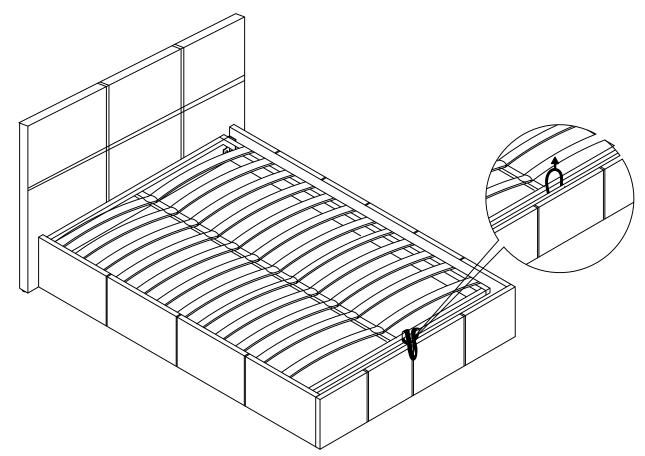

Always use 2 hands at arm's length and only where illustrated on this product. You must ensure the mattress is on the bed frame before lifting the mechanism. Failure to do so may result in injury.

If removing the mattress, make sure the frame is secured so it does not flip open.

When lifting the bed frame, remove pillows and covers.

Please ensure that you pull down firmly as the first time may be stiff but this will ease up with use.

To ensure your safety please do not stand too close in case the frame bounces up.

The weight of the mattress loaded on the frame will keep the frame in a lower position until it is pulled upwards by the user.

Batch no:WMI14904 Page 14 of 14